
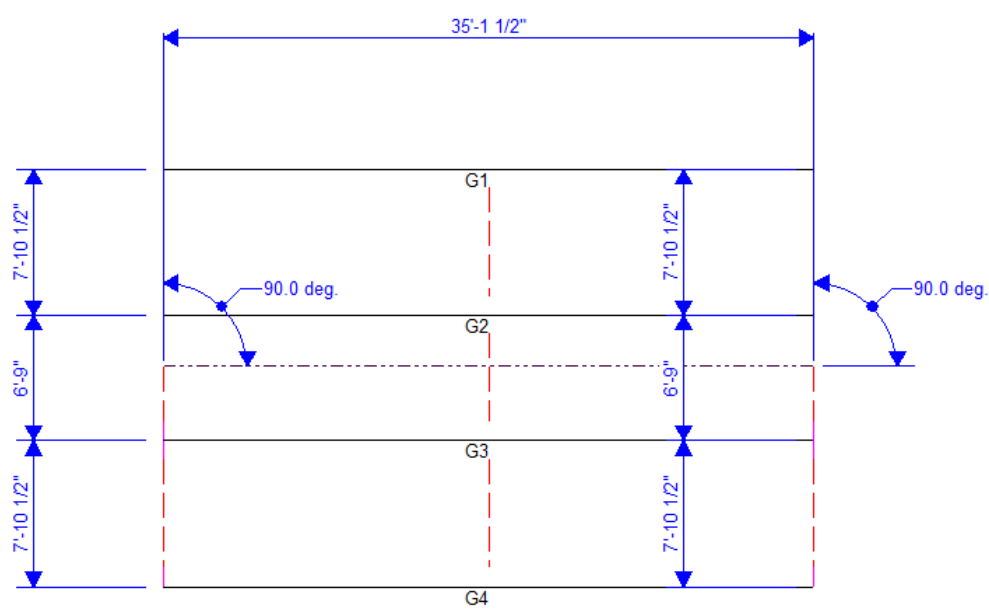


AASHTOWare BrDR 6.8

3D FEM Analysis Tutorial
Single Span Steel 3D Example

3DFEM2 - Single Span Steel 3D Example

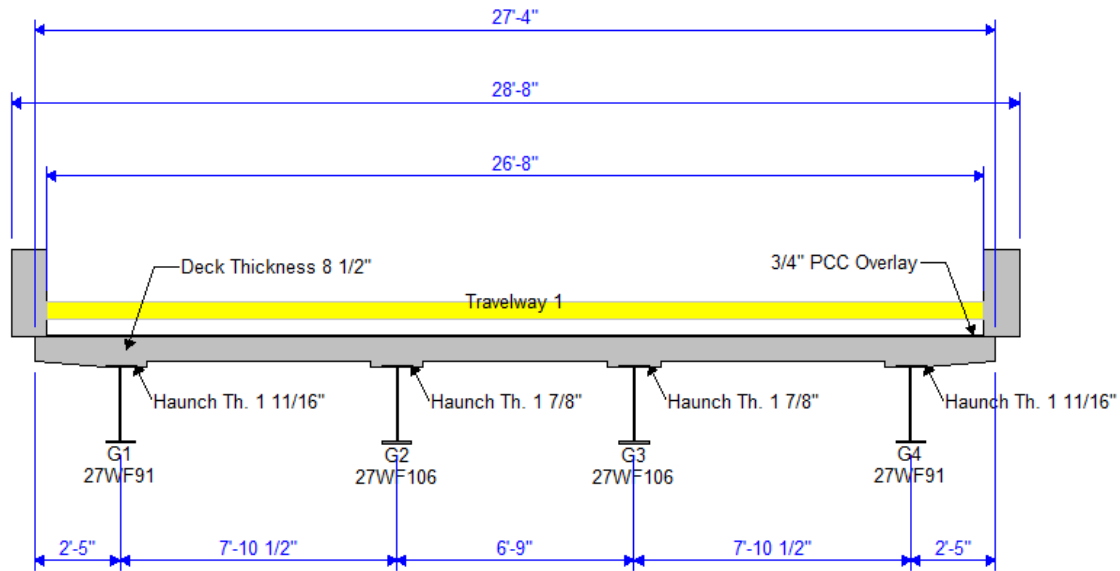


Topics Covered

- 3D analysis of a single span steel rolled beam bridge
- Diaphragm definitions
- 3D analysis settings
- 3D model


This example describes performing a 3D FEM analysis of a single span steel rolled beam structure.

Import “3DFEM2 - Single Span Steel 3D Example.xml” and open the bridge workspace. Open the Diaphragm Definition window shown below.

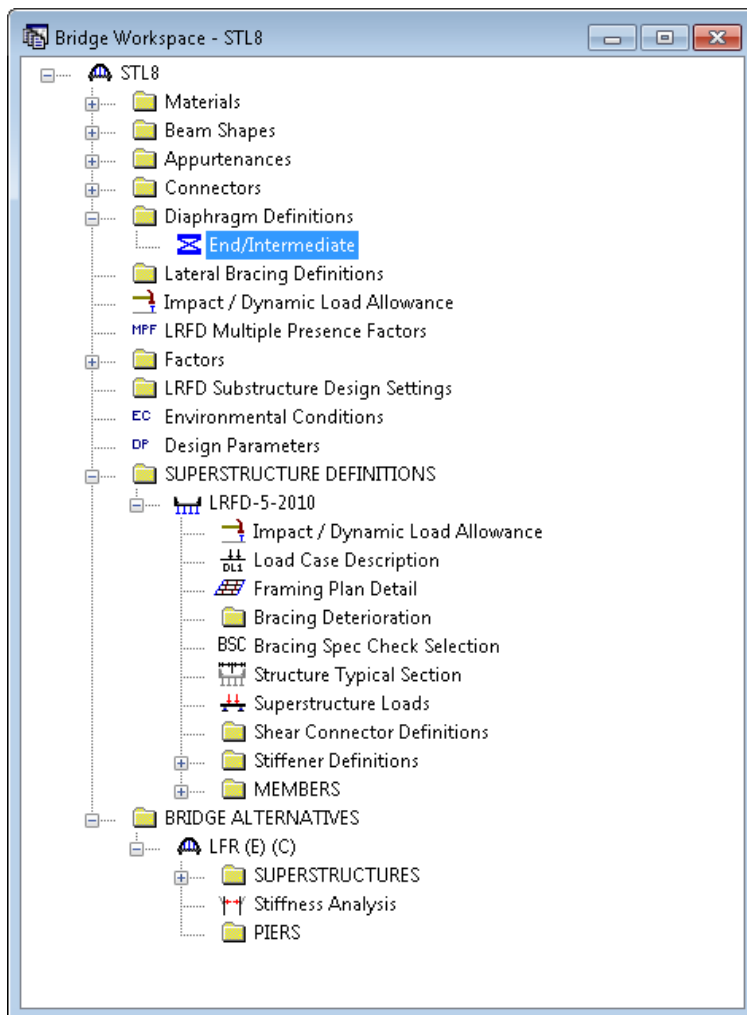

3DFEM2 - Single Span Steel 3D Example


The following window shows a diaphragm definition that can be assigned to locations in the Framing Plan window.

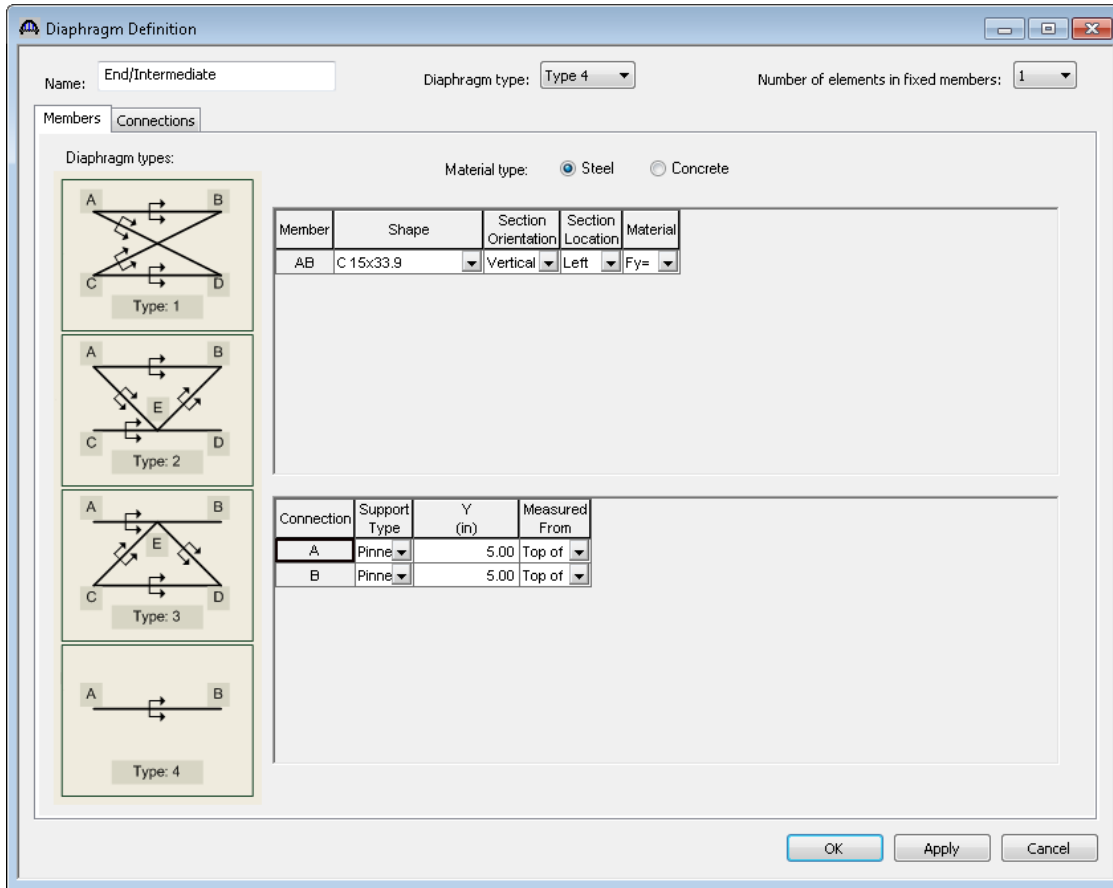

Steel bridges may contain any of the 4 types of diaphragm definitions. Concrete bridges may only contain Type 4 diaphragm definitions.


3DFEM2 - Single Span Steel 3D Example

The Superstructure Definition window contains the following settings to control the 3D analysis. Users can control the influence surface loading in the longitudinal and transverse loading group boxes as well as the generated mesh through the shell element options.

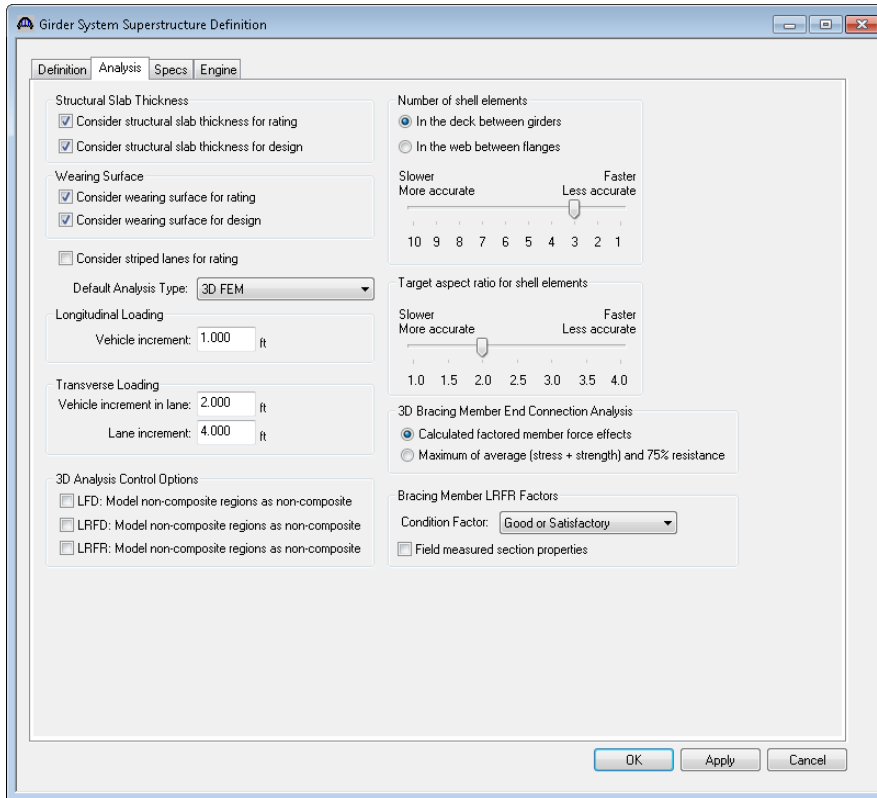


The analysis of all member alternatives in the superstructure definition will use the following engine and specification set on the Specs tab.

3DFEM2 - Single Span Steel 3D Example

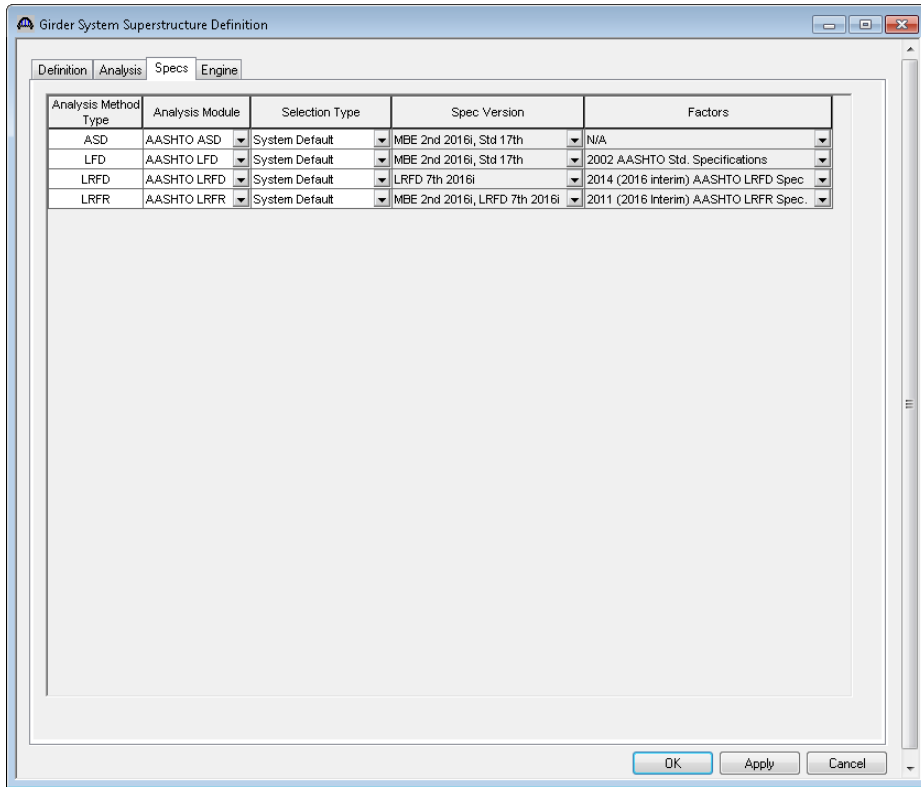


Open the Framing Plan Details: Diaphragms tab to see how diaphragm definitions are assigned to the framing plan. The weight of the diaphragms will be computed by the software and applied to the 3D model.

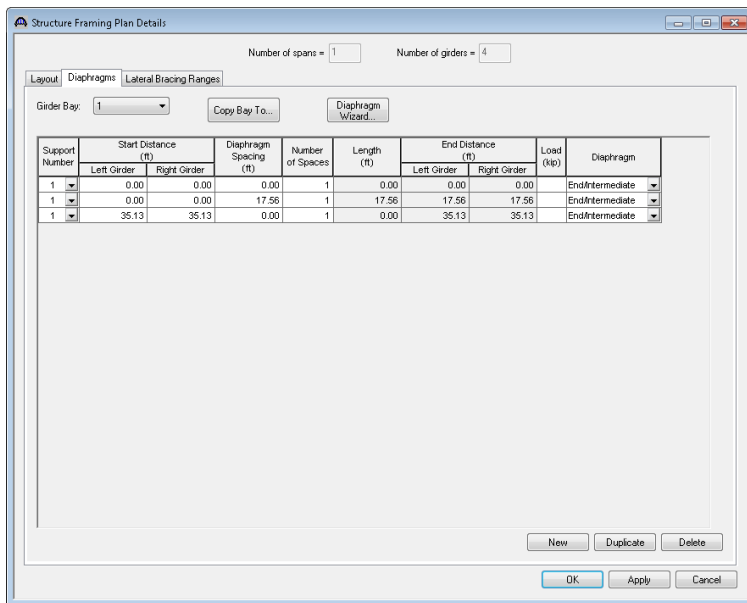


3DFEM2 - Single Span Steel 3D Example

For the Bridge Design training, open the Analysis Settings window and make the following selections for an HL93 Design Review.

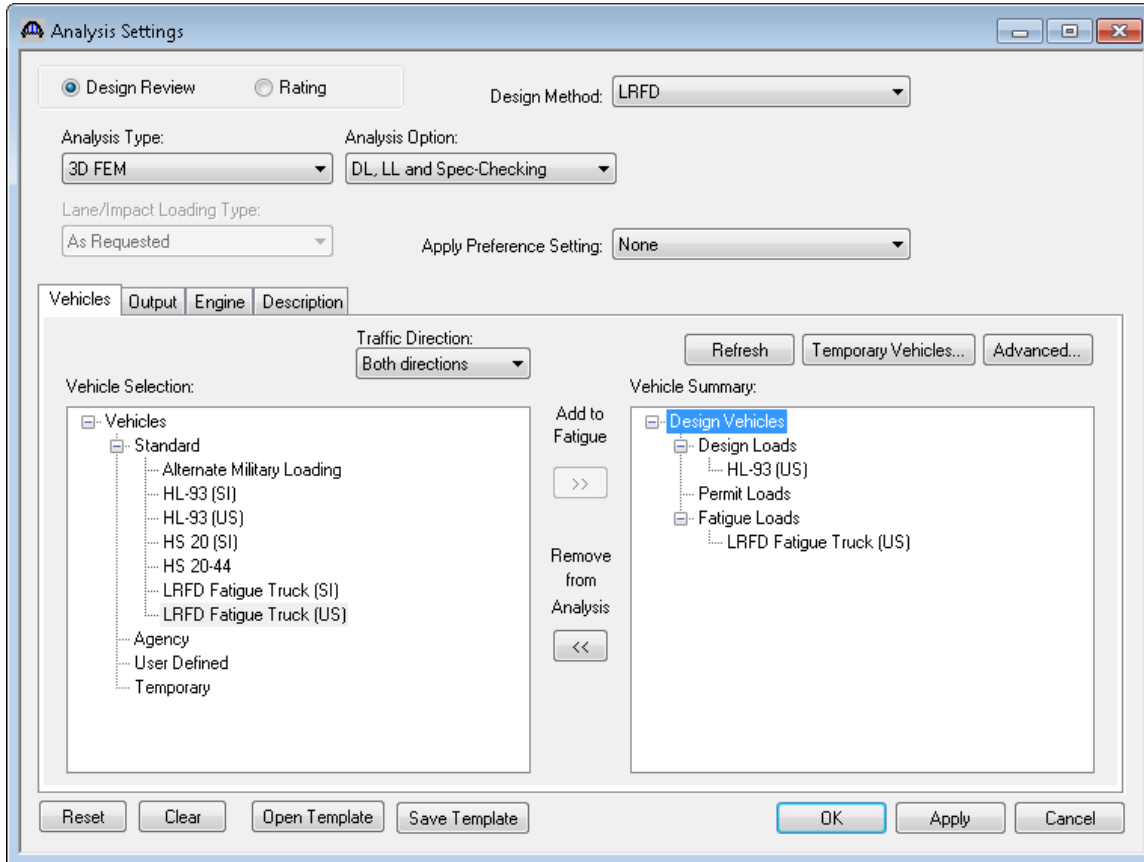


3DFEM2 - Single Span Steel 3D Example

For the Bridge Rating training, open the Analysis Settings window and make the following selections for an HS20 rating.

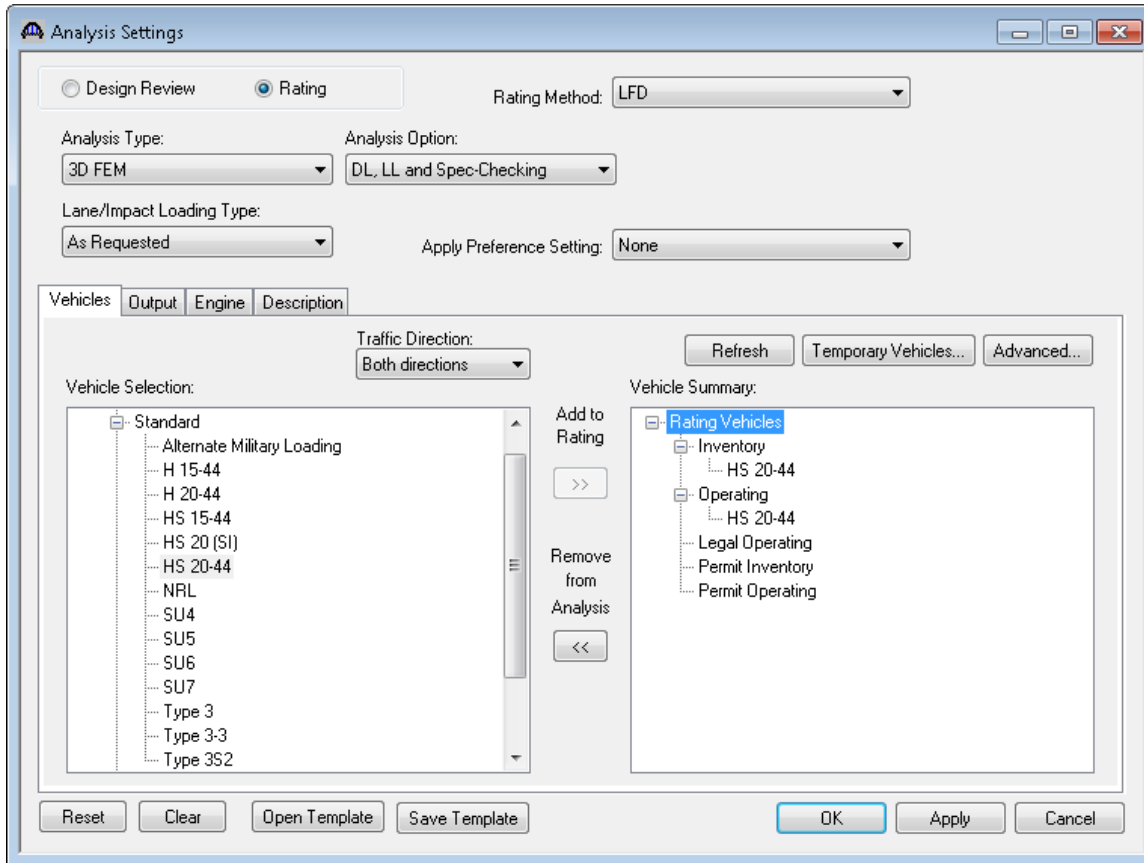

3DFEM2 - Single Span Steel 3D Example


For both training sessions, select the following output controls.

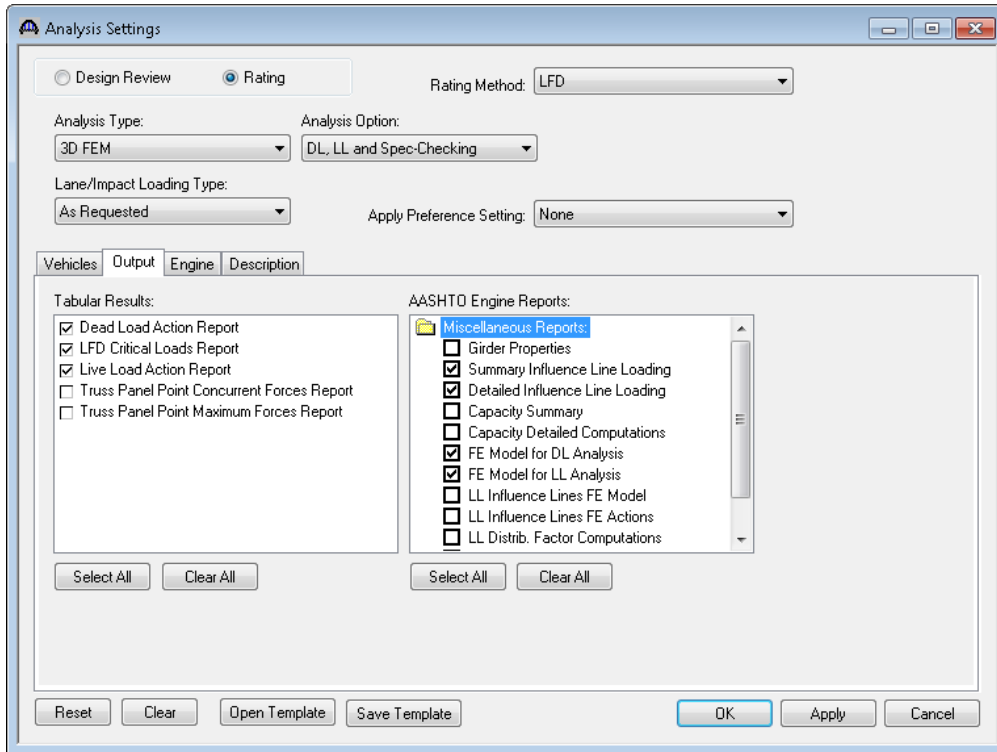

Sit on the superstructure definition and launch the analysis.


The software develops the 3D model using the member alternative marked as Existing for each member. If the member does not have a member alternative marked as Existing and only has 1 member alternative, that member alternative is used for the 3D model. If the member has no member alternative marked as Existing and more than 1 member alternative, the analysis will not be performed.

Spec checking and rating is only performed for member alternatives marked as Existing. For this sample bridge, the spec checking will only be performed for the member alternative for member G2.

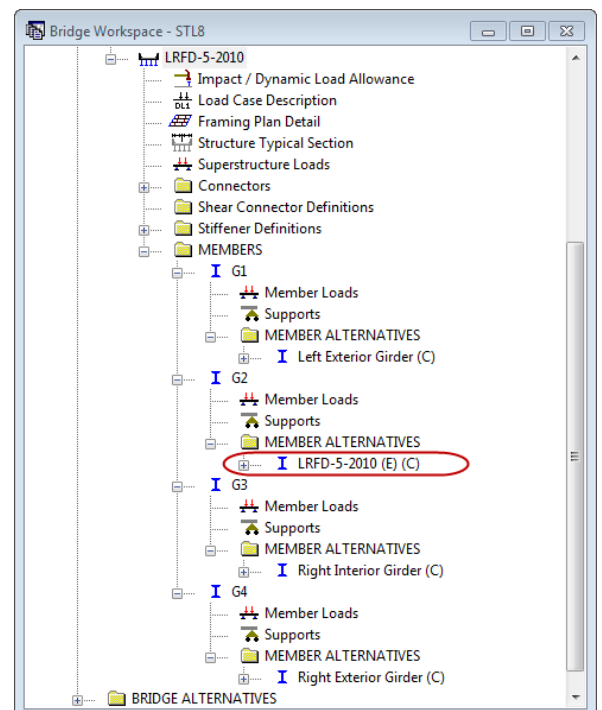


3DFEM2 - Single Span Steel 3D Example

The following shows the output files created by the 3D LRFD design review. Similar files are created for a 3D Std rating.

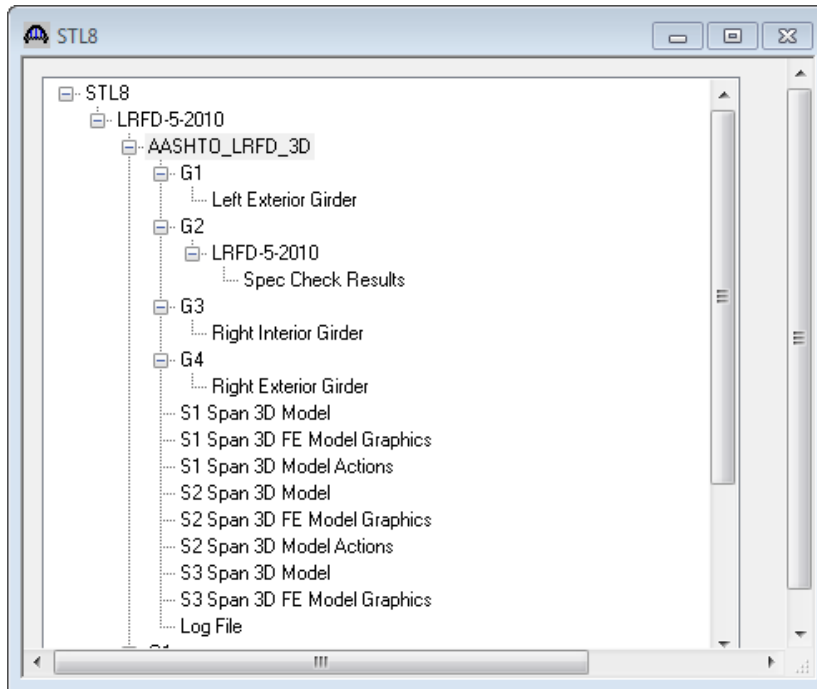

The “3D Model” files list the data for the models including nodes, members, properties and loads. The “3D Model Actions” files list the FE results (reactions, element actions, displacements) for the models. The “Model Graphics” files can be opened to graphically view the FE models. The following shows the graphics for the Stage 1 model which contains the steel beams and diaphragms.

3DFEM2 - Single Span Steel 3D Example

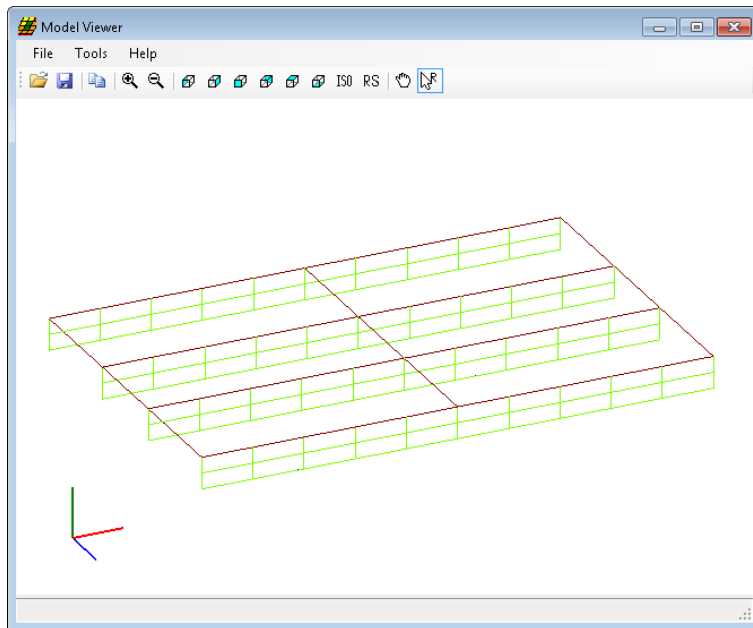

Node and element numbers can be turned on from the Tools menu. The mouse controls manipulation of the view. Zoom by rolling the mouse wheel. Translate by pushing down the mouse wheel. Rotate by pushing down the left mouse button.

The generated influence surfaces for the unit live loading can be viewed by selecting the Stage 3 Graphics model and then selecting File/Open/InfluenceSurfaces.sur. An influence surface for viewing can be chosen by selecting Tools/Change Influence Surface and then selecting desired actions.

3DFEM2 - Single Span Steel 3D Example

Influence Surface


Influence Surface Information

Bridge ID:	STL8
Bridge:	LRFD-Rolled Beam-0 deg Skew
Superstructure Definition:	LRFD-5-2010
User:	Bridge
NBI Structure ID:	STL8
Bridge Alternative:	
Date:	Tuesday, August 16, 2016 14:12:50

Influence Surface Selection

Girder:	Deck Node:	Action:	Face:

OK Cancel

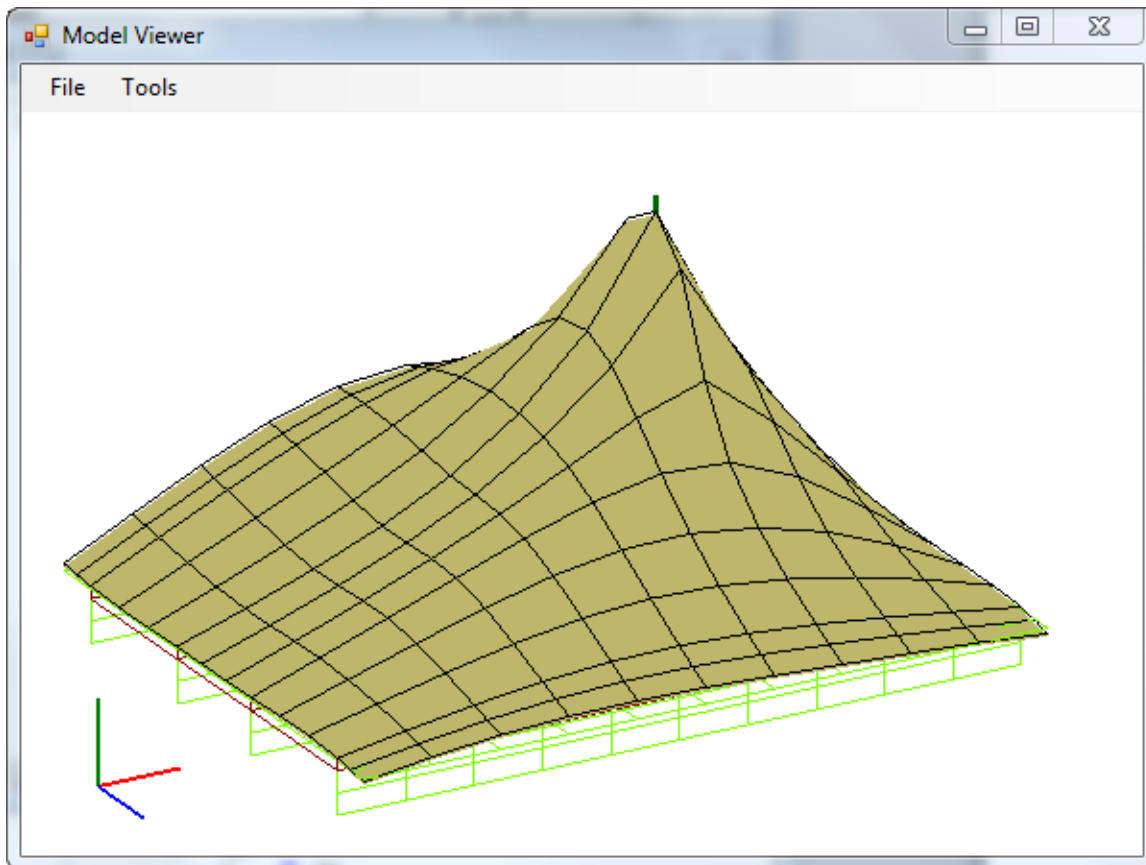

3DFEM2 - Single Span Steel 3D Example

Tabular results and spec check details can be viewed for the member alternatives that were analyzed.

Bridge Explorer (27 Bridge Design/Rating bridges retrieved for the current folder, all rows retrieved) Bridge Workspace - STL8

Analysis Results - LRFD-5-2010

Report Type: Dead Load Actions Stage: Non-composite (Stage 1) Dead Load Case: Self Load (Stage 1:D,DC)

Span	Location (ft)	% Span	Moment (kip-ft)	Shear (kip)	Axial (kip)	Reaction (kip)	X Deflection (in)	Y Deflection (in)
1	0.00	0.0	-0.00	1.86	-0.00	1.86	0.0000	-0.0000
1	3.51	10.0	5.89	1.49	0.00		0.0000	-0.0105
1	7.03	20.0	10.47	1.12	0.00		0.0000	-0.0198
1	10.54	30.0	13.74	0.75	0.00		0.0000	-0.0271
1	14.05	40.0	15.70	0.37	0.00		0.0000	-0.0317
1	17.56	50.0	16.36	-0.00	0.00		0.0000	-0.0333
1	21.08	60.0	15.70	-0.37	0.00		0.0000	-0.0317
1	24.59	70.0	13.74	-0.75	0.00		0.0000	-0.0271
1	28.10	80.0	10.47	-1.12	0.00		0.0000	-0.0198
1	31.61	90.0	5.89	-1.49	0.00		0.0000	-0.0105
1	35.13	100.0	-0.00	-1.86	0.00	1.86	0.0000	-0.0000

AASHTO LFR Engine Version 6.6.0.3003
Analysis Preference Setting: None

Close


Bridge Explorer (27 Bridge Design/Rating bridges retrieved for the current folder, all rows retrieved)

Specification Checks for LRFD-5-2010 - 30 of 366

Specification Reference	Limit State	Flex. Sense	Pass/Fail
✓ 10.48.1 Noncomposite Compact Section	N/A	N/A	Passed
✓ 10.48.1.1 Noncomposite Compact Section Requirements	N/A	N/A	General Comp.
✓ 10.48.2 Braced Noncompact Sections	N/A	N/A	Passed
✓ 10.48.2.1 Cross-section requirements	N/A	N/A	General Comp.
NA 10.48.3 Noncomposite Transition Section	N/A	N/A	Not Applicable
✓ 10.48.4 Noncomposite Noncompact Partially Braced Members	N/A	N/A	Passed
✓ 10.48.4.1.Cb Noncomposite Cb Calculation	N/A	N/A	General Comp.
✓ 10.48.4.1.Mr Noncomposite Mr Calculation	N/A	N/A	General Comp.
✓ 10.48.4.1.Rb Noncomposite Rb Calculation	N/A	N/A	General Comp.
✓ 10.48.8 LFD Shear Calculations	N/A	N/A	Passed
✓ 10.48.8.1.2 Composite Compact Positive Moment Section	N/A	N/A	Not Required
NA 10.50.1.2 Noncompact Positive Moment Members	N/A	N/A	Not Required
NA 10.50.1.2.Rb Composite Rb Calculation	N/A	N/A	Not Required
NA 10.50.2.1 Composite Compact Negative Moment Section	N/A	N/A	Not Required
NA 10.50.2.2 Noncompact Negative Moment Members	N/A	N/A	Not Required
NA 10.50.2.2 Composite Cb Calculation	N/A	N/A	Not Required
NA 10.53.1.2 Braced Noncompact Hybrid Sections	N/A	N/A	Not Required
✓ 6B.4 Steel Combined Moment and Shear	N/A	N/A	Passed
✓ 6B.4 Steel Flexure Moment	N/A	N/A	Passed
✗ 6B.4 Steel Flexure Overload	N/A	N/A	Failed
✓ 6B.4 Steel Flexure Stress	N/A	N/A	Passed
✓ 6B.4 Steel Shear Stress	N/A	N/A	Passed
Depth of web in compression in the Elastic Range (Dc)	N/A	N/A	General Comp.
First Yield Moment (My) Calculations for All Sections	N/A	N/A	General Comp.
✓ LFD General Steel Flexural Results	N/A	N/A	Passed
✓ LFD Steel Elastic Section Properties	N/A	N/A	General Comp.
Plastic Moment (Mp) for Composite Sections in Negative Moment	N/A	N/A	General Comp.
Plastic Moment (Mp) for Composite Sections in Positive Moment	N/A	N/A	General Comp.

3DFEM2 - Single Span Steel 3D Example

The analysis settings window is shown below.

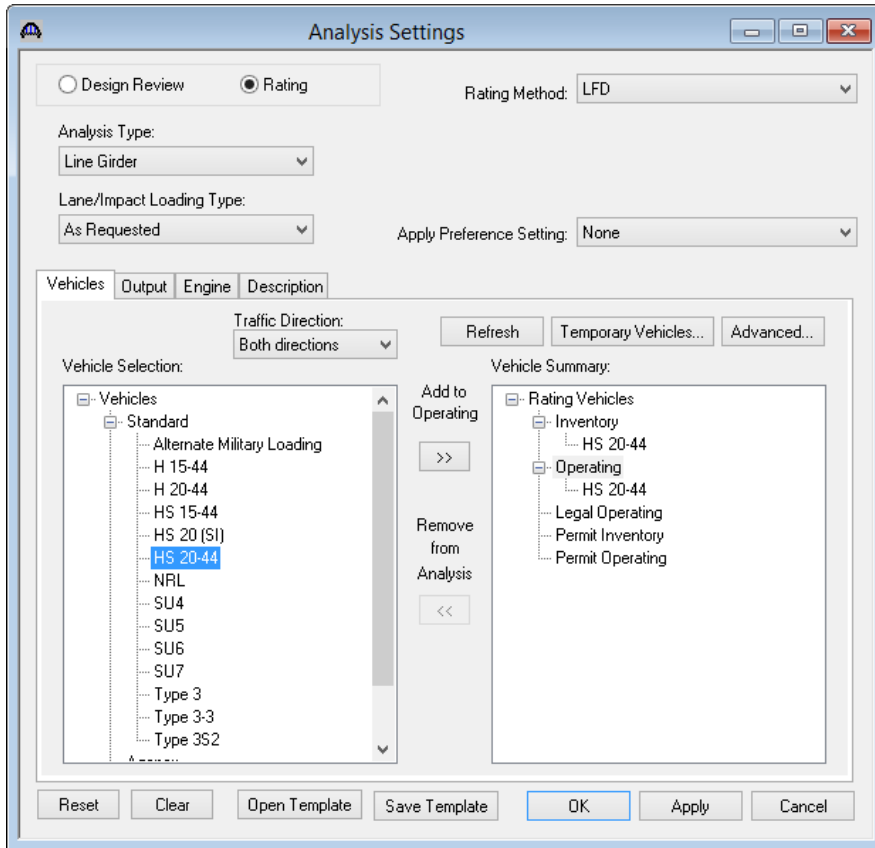

The results of the HS20 rating are shown below.


Live Load	Live Load Type	Rating Method	Rating Level	Load Rating (Ton)	Rating Factor	Location (ft)	Location Span (%)	Limit State	Impact	Lane
HS 20-44	Lane	LFD	Inventory	44.37	1.232	17.56	1 - (50.0)	Service - Steel	As Requested	As Requested
HS 20-44	Lane	LFD	Operating	74.10	2.058	17.56	1 - (50.0)	Service - Steel	As Requested	As Requested
HS 20-44	Axle Load	LFD	Inventory	32.02	0.889	21.08	1 - (60.0)	Service - Steel	As Requested	As Requested
HS 20-44	Axle Load	LFD	Operating	53.47	1.485	21.08	1 - (60.0)	Service - Steel	As Requested	As Requested

3D Model

The modeling techniques used are the result of a survey of researchers and practitioners and review of several software packages.

Steel beams are modeled with:


- Shell elements for the deck
- Beam elements for the top and bottom flanges
- Shell elements for the web

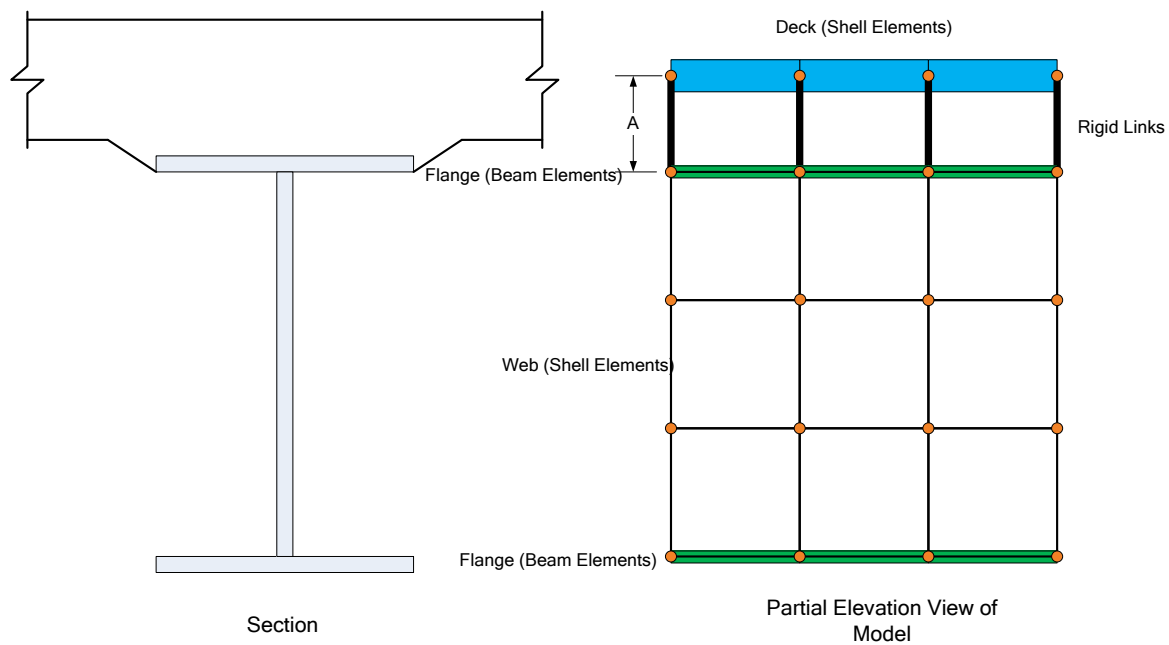


Reinforced concrete beams are modeled with:

- Shell elements for the top flange
- Beam elements for the girder

3DFEM2 - Single Span Steel 3D Example

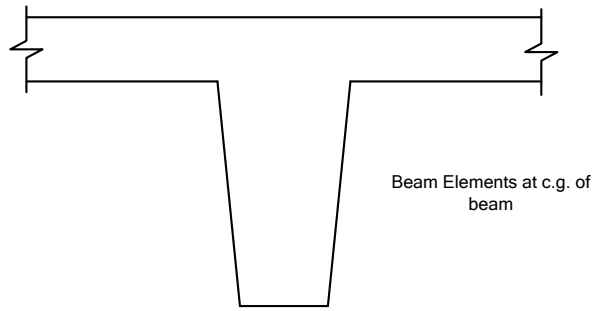


Reinforced Concrete Section

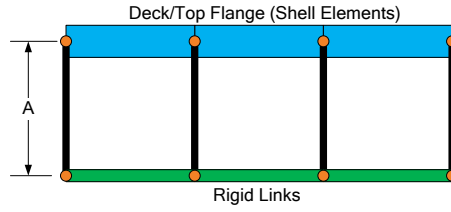


Partial Elevation View of Model

Prestressed concrete beams are modeled with:

- Shell elements for the deck
- Beam elements for the girder

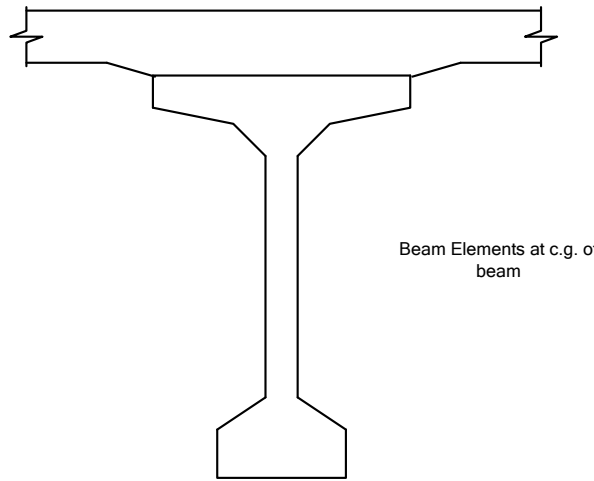


Prestressed Section

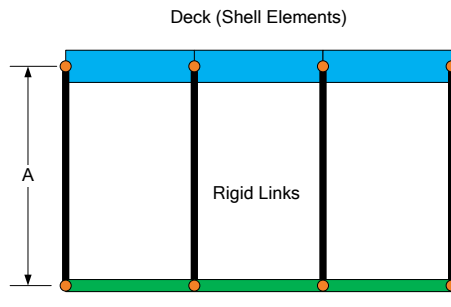

Partial Elevation View of Model

3DFEM2 - Single Span Steel 3D Example

The moment at a beam cross section is calculated by solve the equilibrium equations at that section. This moment is then used in the specification check articles in the same way that it would for a line girder analysis.

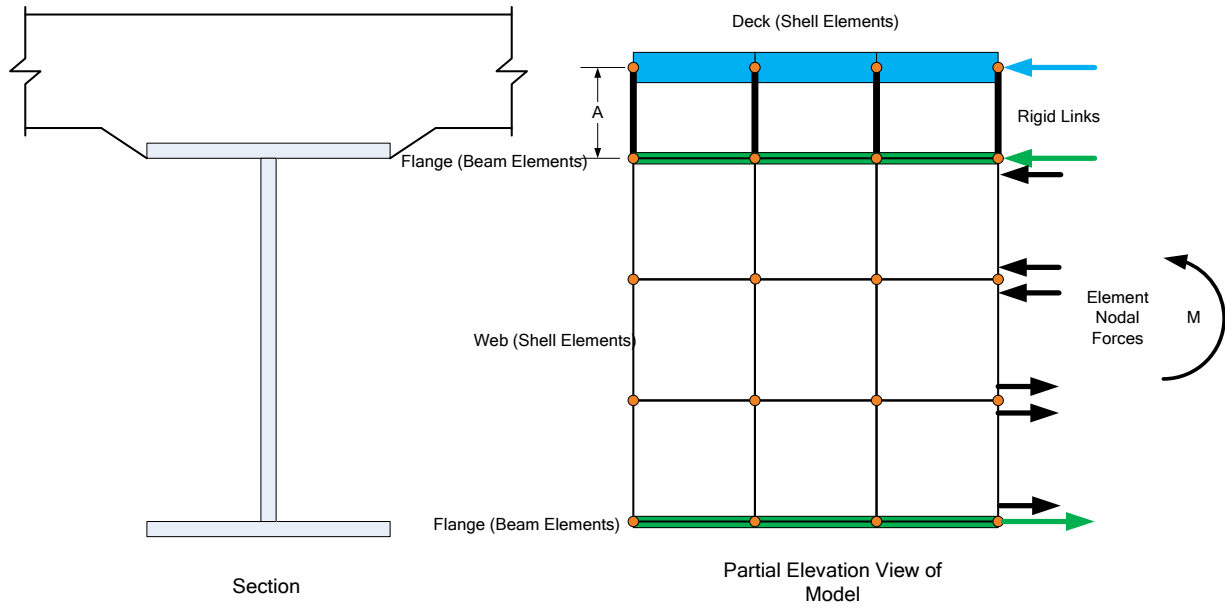

Mesh Generation


The FE model created by BrDR will contain nodes at the following locations.

- Cross section property change points
- Span tenth points
- Support locations
- Diaphragm locations
- User defined points of interest


The user controls the mesh generation by the controls previously shown on the Superstructure Definition: Analysis tab. The software creates the mesh following the number of elements selected between beams or within the web of a steel beam and the target aspect ratio entered by the user. The presence of nodes at the locations listed above may result in some elements falling outside the target aspect ratio.

The following plan views show how the mesh for this example can be controlled by the user.

3 shells between beams, target aspect ratio = 2

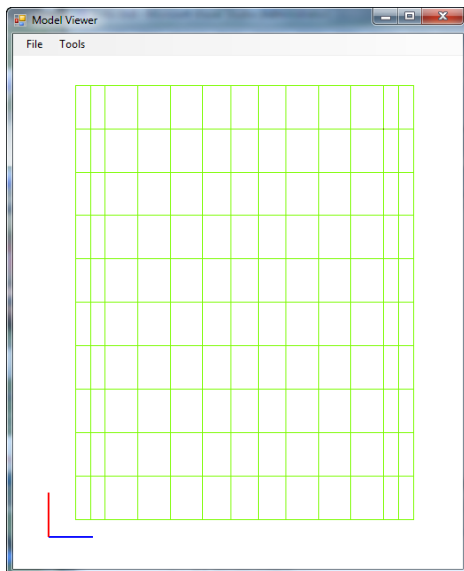

4 shells between beams, target aspect ratio = 1

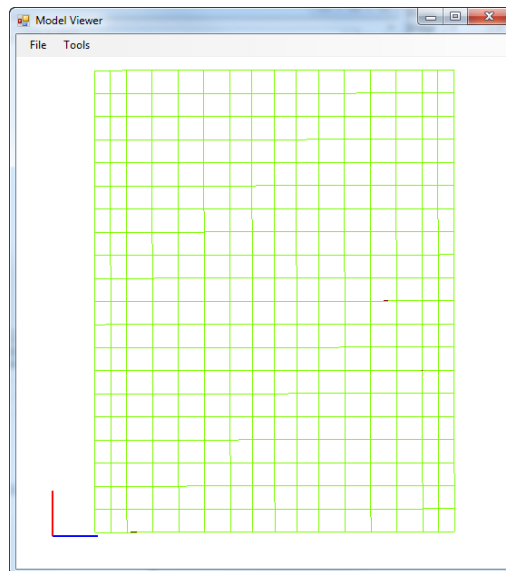

Loading

The program computes all of the dead loads acting on the beam including the self-weight of the beam, user defined appurtenances on the structure typical section, wearing surfaces, diaphragms and user defined member loads. Composite dead loads are applied directly to the deck shells in the 3D model in their actual location. They are not distributed to the girders based on the choices available in the Superstructure Loads window.

The Stage 3 FE model is loaded with unit loads at each deck node within the travelway to generate influence surfaces for the beam. Lane positions and combinations are determined based on the travelway and the transverse loading parameters set by the user on the Superstructure Definition: Analysis Settings tab. The influence surfaces are then loaded with the selected vehicles to find the maximum live load effects.